


AUTOMOTIVE FUSE TESTER

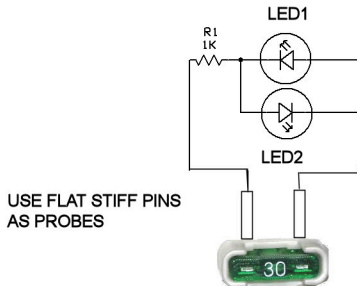

NOTES: THIS FUSE TESTER IS ONLY TO BE USED WITH 12 VOLT CIRCUITS.

THIS TESTER TESTS THE FUSE WHILE THE FUSE IS STILL INSERTED INTO THE FUSE HOLDER. (IN CIRCUIT TEST)

TO USE: PLACE PROBES ACROSS THE FUSE.

FUSED CIRCUIT MUST BE LIVE.

IF EITHER LED ILLUMINATES.
THEN FUSE IS BLOWN (OPEN).

PARTS LIST

R1 - 1K 1/4W RESISTOR

LED1 / LED2 - RED LED

© 2008 SMC ELECTRONICS

www.smcelectronics.com

SMC ELECTRONICS		
AUTOMOTIVE FUSE TESTER		